



1.3. Drawing

1.3.1. Spare Parts - Body

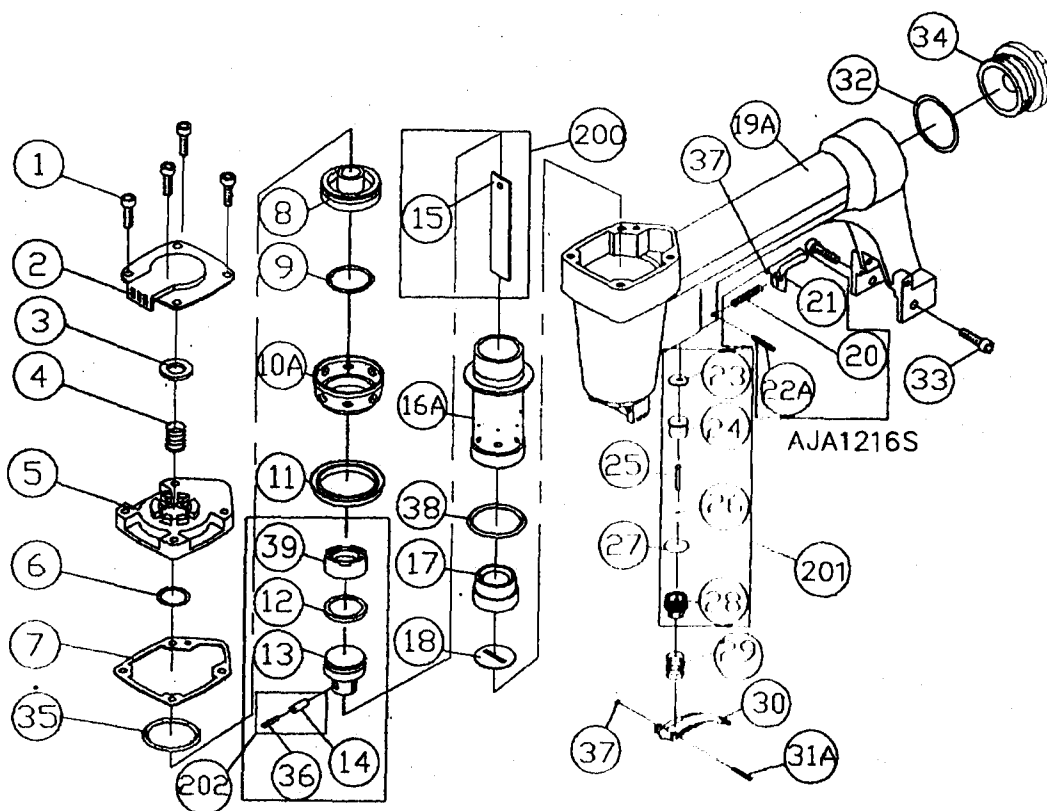

CODE	PART NO	DESCRIPTION	QTY
1	CMD04220	Bolt M4x22	4
2	BJAAF06000	Exhaust Cover	1
3	BJAAA03000	Washer	1
4	BJAAA02000	Spring	1
5	BJAAA01000	Body Cap	1
6	BJAAF14000	Seal	1
7	COA279250	O-Ring	1
8	BJAAA21000	Valve Piston	1
9	COA205350	O-Ring	1
10A	BJAAB03001	Collar	1
11	BJAAB07000	Seal	1
12	COP18	O-Ring	1
13	BJADC02000	Main Piston	1
14	CPJ4012	Pin	1
15	BJADC01000	Driver Blade	1
16A	BJAAB01001	Main Cylinder	1
17	BJAAB02000	Main Piston Stop	1
18	BJADF02000	Steel Driver Plate	1
19A	BJAAF01001	Body Housing	1
20	BKA EW16000	Spring	1
21	BKABD02000	Secondary Trigger	1
22A	BTADD12000	Pin	1
23	BKABF08000	Washer	1
24	BKABE21000	Air Switch Casing	1
25	BKABE31000	Stem of Air Switch	1
26	COA035150	O-Ring	1
27	COA110200	O-Ring	1
28	BKABE01000	Air Switch Housing	1
29	BKABD06000	Spring	1
30	BJAAD01000	Trigger	1
31A	BTADD03000	Pin	1
32	COP29	O-Ring	1
33	CMS04100	Bolt M4x10	2
34	BJAAF12000	Rear Cap	1
35	COP14	O-Ring	1
36	CPJ2512	Pin 2.5x12	1
37	COA014150	O-Ring	2
38	COA254310	O-Ring	1
39	BJAAC03000	Main Piston Cap	1
200	BJADC00000	Driver Assembly	1
201	BKABE00000	Air Switch Assembly	1
202	CPJ4212	Pin Unit (#14/36)	1

1.3.2. Spare Parts - Magazine

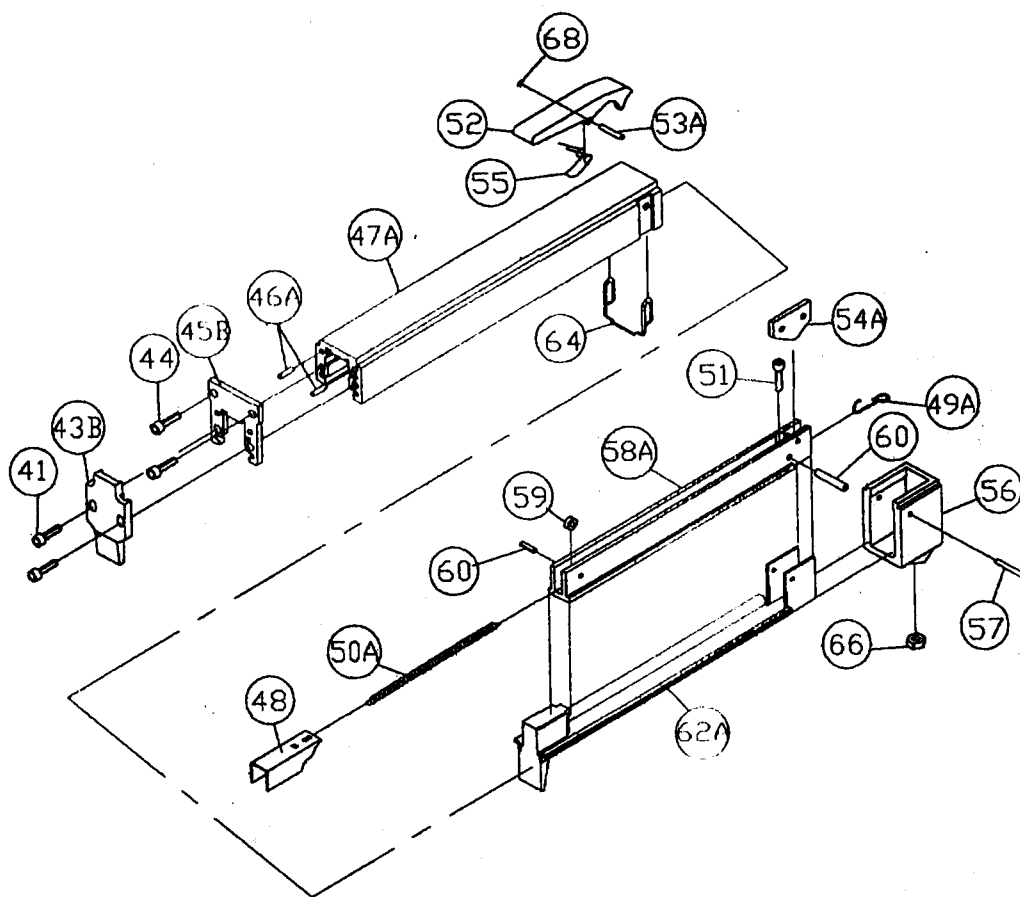

CODE	PART NO	DESCRIPTION	QTY
41	CMD04160	Bolt M4x16	2
43B	BJADW01002	Main Bit Guide	1
44	CMD04120	Bolt M4x12	2
45B	BJADP22002	Spacer	1
46A	CPP3010	Pin	2
47	BJAAX01000	Magazine Cover	1
48	BJADP04000	Staple Feeder	1
49A	BJAAP16001	Spring Hook	1
50A	BJAAP05001	Spring	1
51	CMD04140	Bolt M4x14	1
52	BJAAP41000	Click Lever	1
53A	BJAAP47000	Pin	1
54A	BJAAP51000	Guider	1
55	BKAJP44000	Spring of Pawl	1
56	BJAAP23000	Stopper	1
57	CPS3028	Pin	1
58A	BJADP21001	Magazine Guide Board	1
59	BJADP32000	Wheel	1
60	CPS3010	Roller of Wheel	1
62A	BJADY01001	Conversion Board	1
64	BJAAY07000	Clip	1
66	CN1041	Hex Nut	1
67	CPS3010	Pin	1
68	COA014150	O-Ring	1