
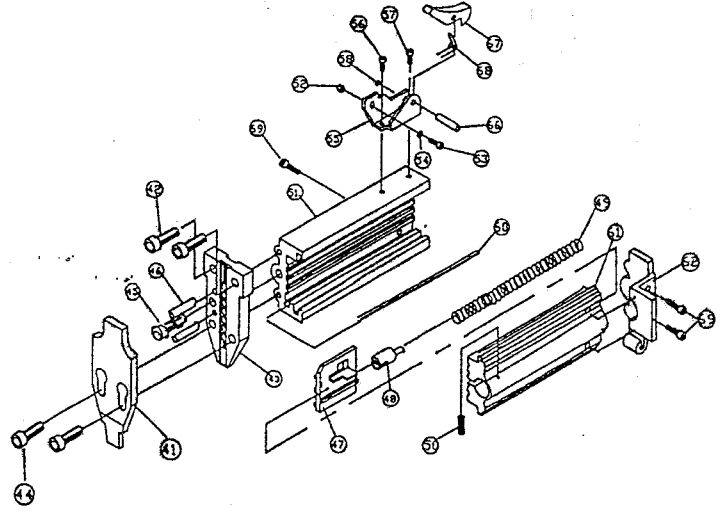


1.4. Drawing

1.4.1. Spare Parts - Body

1.4.2. Spare Parts - Magazine

MODEL NO.
ATT-0232 / ATT-0232S
(ATA02320 / ATA0232S)

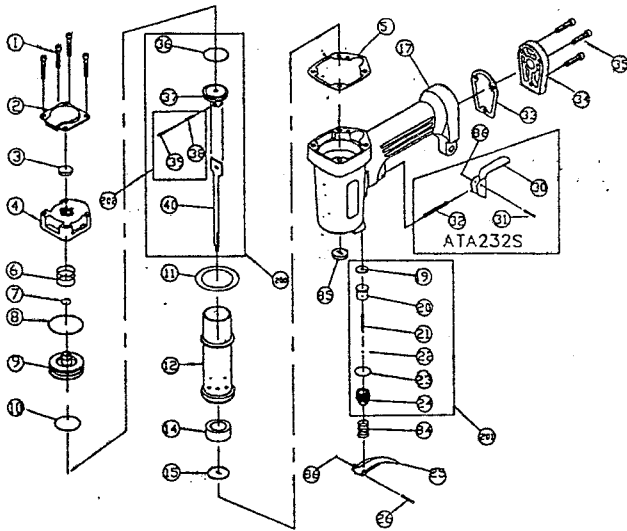

Spare Parts - Body

Spare Parts - Magazine

CODE	PART NO	DESCRIPTION	QTY
1	CMD05300	Bolt M5x30	4
2	BTADF06000	Exhaust Cover	1
3	BKABA03000	Exhaust Bumper	1
4	BTADA01000	Head Cap	1
5	BTADF14000	Seal	1
6	BKABA02000	Spring	1
7	COP9	O-Ring	1
8	COA324300	O-Ring	1
9	BKABA21000	Valve Piston	1
10	COP26	O-Ring	1
11	COP38	O-Ring	1
12	BTADB01000	Main Cylinder	1
14	BKABB02000	Driver Bumper	1
15	BKABF02000	Steel Driver Plate	1
17	BTADF01000	Body Housing	1
19	BKABF08000	Nylon Washer	1
20	BKABE21000	Trigger Valve Cage	1
21	BKABE31000	Trigger Valve Stem	1
22	COA036150	O-Ring	1
23	COA110200	O-Ring	1
24	BKABE01000	Air Switch Cover	1
25	BKABD01000	Trigger	1
26	BTADD03000	Pin	1
30	BKABD02000	Secondary Trigger	1
31	BTADD12000	Pin	1
32	BKAEW16000	Spring	1
33	BTADF13000	Seal	1
34	BTADF12000	Rear Cap	1
35	CMD04120	Bolt M4x12	3
36	COA224310	O-Ring	1
37	BKABC02000	Main Piston	1
38	CPJ4010	Pin	1
39	CPJ2510	Pin	1
40	BKADC01000	Driver Blade	1
84	BKABD06000	Spring	1
85	BKABF05000	Plastic Driver Guide	1
86	COA014150	O-Ring	2
200	BKADC00000	Driver Assembly	1
201	BKABE00000	Air Switch Assembly	1
202	CPJ4210	Pin (#38/39)	1

CODE	PART NO	DESCRIPTION	QTY
41	BTAWW01000	Main Bit Guide	1
42	CMD05200	Bolt M5x20	2
43	BTAWP22000	Secondary Bit Guide	1
44	CMD04100	Bolt M4x10	2
45	CMD04120	Bolt M4x12	1
46	CPS3014	Spring Pin	2
47	BTAWP04000	Brad Feeder	1
48	BKAFW09000	Feeder Fixture	1
49	BKAFP05000	Spring	1
50	CML03100	Spring Pin	2
51	BTAWX01000	Magazine Guide Board	1
52	CN1051	Nut M5	1
53	CMD05220	Bolt M5x22	1
54	CW0051010	Washer	1
55	BTAFW08000	Magazine Supporter	1
56	CMD04060	Bolt M4x6	1
57	CMR04060	Bolt M4x6 (Round)	1
58	COA014150	O-Ring	1
60	BKAFX02000	Steel Plate	1
61	BTAWY01000	Magazine Cover	1
62	BTAWY04000	Rear Fixture	1
66	BTAFP47000	Pin	1
67	BTAFP41000	Stopper	1
68	BTAFP44000	Spring	1
69	CMD04060	Bolt	3